


Xblock & SignBlock installation guide

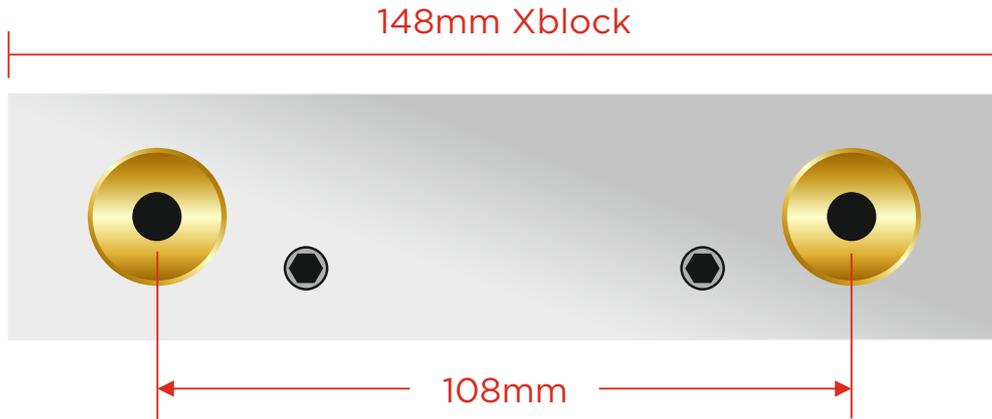

1. Measure the distance between the hole centres of the olive fixings (for 148mm Xblock it is 108mm).
2. Measure and mark on the mounting surface the acquired distance, ensuring the holes are level.
3. Drill the holes and insert wall plugs or suitable fixings.
4. Remove the olive fixings from the Block by releasing the Top Grub screws using an allen key.
5. Secure the olive fixings to the mounting surface using a suitably sized countersunk screw, ensuring the flat surface of the olive is against the wall.
6. Ensure the panel is mounted into the Block using the Panel grub screws before securing to the wall.
7. Place the Block over the olive fixings and then secure the Block by tightening the Top Grub screws.

